

# Leviton Digital Dimming System DDS 5600 Dimmer Pack

INSTALLATION AND QUICK START GUIDE



## Warranty

Leviton Manufacturing Co Inc. warrants this dimmer pack to be free of material and workmanship defects for a period of one year after system acceptance or 26 months after shipment, whichever comes first. This Warranty is limited to repair of replacement of defective equipment returned Freight Pre-Paid to Leviton Lighting & Energy Solutions Division at PO Box 2210, Tualatin, Oregon 97062, USA. User shall call 1-800-959-6004 and request a return authorization number to mark on the outside of the returning carton, to assure that the returned material will be properly received at Leviton. All equipment shipped back to Leviton must be carefully and properly packed to avoid shipping damage. Replacements or repaired equipment on the job site, and will not honor charges for such work. Leviton will not be responsible for any loss of use time or subsequent damages should any of the equipment fail during the warranty period, but agrees only to repair or replace defective equipment returned to is short circuited, abused, or altered in any manner. Neither the seller nor Leviton shall be liable for any injury, loss or damage, direct or consequential arising out of the use of or inability to use the equipment. This Warranty does not cover lamps, ballasts, and other equipment with is supplied or warranted directly to the user by their manufacturer. Leviton makes no warranty as to the Fitness for Purpose or other implied Warranties.

For Technical Assistance Call: 1-800-824-3005 (U.S.A. Only) www.leviton.com Software Revision 1.33 Version C UL Versions

# **Table of Contents**

INTRODUCTION	3
SPECIFICATIONS	3
MOUNTING	3
AC POWER CABLE	4
AC OUTPUT RECEPTACLES	
MICROPLEX MULTIPLEX CONTROL WIRING	4
ANALOG 0-10 VDC CONTROL WIRING	4
DMX512 MULTIPLEX CONTROL WIRING	
LED INDICATORS	5
AUTO LAMP TEST	
CHANNEL FUSES	
INSTALLATION AND OPERATION TIPS	5
ADDRESSING	
INTERNAL JUMPER SELECTION	
Softstart NON DIM Channels (Relay Mode)	7
AUTO SEQUENCING MODE	7

## INTERNAL JUMPER SELECTIONS

#### Caution: The following procedures should be performed by qualified personnel only.

Remove all power and remove the cover of the dimmer pack. Locate and change configuration DIP swutch settings on the firing card as indicated in the following section.

#### Softstart

The Softstart mode of operation forces at least a 1/10th second delay between the output being full OFF to the output being full ON to allow a more gradual warming of the lamp filaments. Thermal shock and inrush currents are reduced thereby increasing lamp life. Softstart should not be used when quick dimmer response is desired, such as chasing.

To enable Softstart, remove the jumper block from the pin marked P13 on the firing card. Replacing the jumper block will disable Softstart. Switch DIP 1 Off.

NOTE: The channels of the DDS 5600 configured for NON DIM operation will not be affected by Softstart.

#### NON DIM Channels (Relay Mode)

Any of the channels of the DDS 5600 may be configured as NON DIM channels. This will cause the output of the channel to go to full ON whenever the input signal is over 15%. When the input signal drops to less than 10%, the channel output goes to full OFF. This is the equivalent of a zero-crossing solid state relay.

To configure a channel for NON DIM operation simply switch the dip switches on the firing card as indicated below. Moving the switch to ON will restore dimming operation.

CHANNEL	DIP SWITCH	CHANNEL	DIP SWITCH
1	3 OFF	2	4 OFF
3	5 OFF	4	6 OFF

#### AUTO SEQUENCING MODE

The DDS 5600 dimmers can be configured to perform stand alone Automatic Sequencing in place of Auto Lamp Test. This is useful for lighting displays and show windows. The four channels will automatically fade from one to another in a preprogrammed pattern and time selected by the front panel DIP switch whenever DIP switch #8 is down and no multiplex signal is detected. The analog control input will continue to operate while the dimmer is sequencing. Patterns and time settings are set by external dip switches 1-6.

To enable Automatic Sequencing Mode switch DIP 2 Off.

NOTE: Auto sequence will not start unless internal DIP 2 and external DIP 8 are off and control signal must be absent.

**Dip Switch Settings** 

STEP TIME	SWITCH 1, 2, 3	PATTERN	SWITCH 4, 5, 6
1 SECOND	OFF, OFF, OFF	2 CHAN BUILD	OFF, OFF, OFF
3 SECOND	ON, OFF, OFF	3 CHAN SEQUENCE	ON, OFF, OFF
5 SECOND	OFF, ON, OFF	3 CHAN BUILD	OFF, ON, OFF
10 SECOND	ON, ON, OFF	2 & 4 CHAN ALT	ON, ON, OFF
15 SECOND	OFF, OFF, ON	4 CHAN SEQUENCE	OFF, OFF, ON
30 SECOND	ON, OFF, ON	4 CHAN BUILD	ON, OFF, ON
45 SECOND	OFF, ON, ON	4 CHAN BUILD +	OFF, ON, ON
60 SECOND	ON, ON, ON	4 CHAN RANDOM	ON, ON, ON

DIP switch #7 ON causes all above sequences to ping-pong.

## **DIP SWITCH SETTINGS**

When using any of the multiplex control systems, the DIP switches on the front panel of the DDS 5600 must be set to assign the desired dimmer channels. The switches control the dimmer channels in groups of four. See the following chart for settings.

DIP SWITCH CHANNEL ASSIGNMENTS (1=up, 0=down)					
CONTROL	1234567	CONTROL	1234567	CONTROL	1234567
1-4	0000000	5-8	1000000	9-12	0100000
13-16	1100000	17-20	0010000	21-24	1010000
25-28	0110000	29-32	1110000	33-36	0001000
37-40	1001000	41-44	0101000	45-48	1101000
49-52	0011000	53-56	1011000	57-60	0111000
61-64	1111000	65-68	0000100	69-72	1000100
73-76	0100100	77-80	1100100	81-84	0010100
85-88	1010100	89-92	0110100	93-96	1110100
97-100	0001100	101-104	1001100	105-108	0101100
109-112	1101100	113-116	0011100	117-120	1011100
121-124	0111100	125-128	1111100	129-132	0000010
133-136	1000010	137-140	0100010	141-144	1100010
145-148	0010010	149-152	1010010	153-156	0110010
157-160	1110010	161-164	0001010	165-168	1001010
169-172	0101010	173-176	1101010	177-180	0011010
181-184	1011010	185-188	0111010	189-192	1111010
193-196	0000110	197-200	1000110	201-204	0100110
205-208	1100110	209-212	0010110	213-216	1010110
217-220	0110110	221-224	1110110	225-228	0001110
229-232	1001110	233-236	0101110	237-240	1101110
241-244	0011110	245-248	1011110	249-252	0111110
253-256	1111110	257-260	0000001	261-264	1000001
265-268	0100001	269-272	1100001	273-276	0010001
277-280	1010001	281-284	0110001	285-288	1110001
289-292	0001001	293-296	1001001	297-300	0101001
301-304	1101001	305-308	0011001	309-312	1011001
313-316	0111001	317-320	1111001	321-324	0000101
325-328	1000101	329-332	0100101	333-336	1100101
337-340	0010101	341-344	1010101	345-348	0110101
349-352	1110101	353-356	0001101	357-360	1001101
361-364	0101101	365-368	1101101	369-372	0011101
373-376	1011101	377-380	0111101	381-384	1111101
385-388	0000011	389-392	1000011	393-396	0100011
397-400	1100011	401-404	0010011	405-408	1010011
409-412	0110011	413-416	1110011	417-420	0001011
421-424	1001011	425-428	0101011	429-432	1101011
433-436	0011011	437-440	1011011	441-444	0111011
445-448	1111011	449-452	0000111	453-456	1000111
457-460	0100111	461-464	1100111	465-468	0010111
469-472	1010111	473-476	0110111	477-480	1110111
481-484	0001111	485-488	1001111	489-492	0101111
493-496	1101111	497-500	0011111	501-504	1011111
505-508	0111111	509-512	1111111		

When the automatic sequencing feature is operating, the DIP switch selects the operating sequence pattern and speed. See the section on INTERNAL JUMPER SELECTION for details.

### INTRODUCTION

The Leviton DDS 5600 dimmers represents a key part of a state of the art, integrated lighting control system. These dimmers may operate in a "stand alone" mode for automated lighting of displays or may be combined with a Leviton memory lighting console for total lighting control.

The DDS 5600 provides four 600W Channels, this dimmer is designed for portable or semi-permanent use for entertainment or display lighting. Several DDS dimmer packs may be combined for more channels of lighting.

## SPECIFICATIONS


Number of Channels:	Four.	
Number of Channels.	Foul.	
Output Capacity:	DDS 5600: 600 Watts per channel.	
Input Power:	DDS 5600-15: 120 VAC, 1800 Watts Max. DDS 5600-15: 240 VAC, 2400 Watts Max. DDS 5600-20: 120 VAC, 2400 Watts Max.	
Dimmer Control System:	Microprocessor digital phase control dimming or zero-crossing relay mode.	
Load Filtering:	160 Micro-Second Rise Time.	
Control Input Types:	0-10 VDC each channel on a 5-pin DIN connector. Microplex multiplex signal (128 channel) on a 3-pin XLR type connector. DMX512 digital signal (512 channel) on a 5-pin XLR optional.	
Control Wiring:	Control Wiring: Class 2 low voltage.	
Output Connections:	DDS 5600: 2 NEMA 5-15 outlets per channel.	
Cooling System:	Passive internal aluminum heatsinks.	
Load Type:	AC lighting (tungsten) loads only.	
Enclosure Type:	For indoor use only.	
Ambient Temperature:	100 degrees maximum.	

#### MOUNTING

The Leviton DDS 5600 dimmer packs are designed to be mounted vertically. Each dimmer pack is provided with mounting flanges at the top that accepts a mounting bolt or "C" clamp. The back cover can be reversed to hang the unit from a pipe. Pipe mount units should be secured with a safety cable.

Since the DDS 5600 depends upon convection cooling, room air flow must be insured. Keep the air vents located on each side of the dimmer pack clear of dust or any obstructions. In order for unit to cool properly the surface containing the control receptacles must be oriented towards the floor.

If several units are to be operated in a small enclosed room, adequate ventilation must be provided to prevent the room temperature from exceeding 100 degrees Fahrenheit.

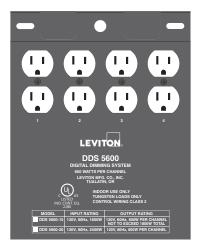

#### **AC POWER CABLE**

This is the main power cord for your dimmer pack which ultimately carries all of the AC power consumed by lights connected to the dimmer pack. The DDS 5600 with the NEMA 5-15 plug is limited to 1800 Watts max., while the unit with the NEMA 5-20 plug will support the full 2400 Watts. It must be connected to a power source capable of supplying the total power drawn by the lights. (See SPECIFICATIONS for details on maximum power capability).

WARNING: Do not remove grounding prong of AC plug. To do so may allow exposure to potentially lethal voltage levels and will void the warranty on this product.

## AC OUTPUT RECEPTACLES

The DDS 5600 has two AC receptacles for each channel. These receptacles provide power to the lamps in your lighting system. The amount of power supplied to these outlets controls the intensity of the lamps connected.


The total lamp wattage connected to each channel must not exceed the rating of each channel (see SPECIFICATIONS).

## MICROPLEX MULTIPLEX CONTROL WIRING

Microplex is the control protocol used on most Leviton lighting consoles. This system uses a single three conductor cable to transmit up to 128 channels of dimmer control. For short distances (50 feet or less) a standard microphone cable may be used to carry both the control signal and the DC power source for Leviton control consoles. Longer distances may be accommodated with 18 gauge or better cable to reduce voltage losses of the power supply.

Connect the Microplex control cable to either of the three pin XLR jacks. Since both jacks are wired in parallel, another control cable may be connected between the remaining jack and another dimmer pack. Many dimmer packs may be "daisy chained" together in this manner.

Be sure to set the Channel Address DIP switch as required (see DIP SWITCH SETTINGS).




### ANALOG 0-10 VDC CONTROL WIRING

Each of the four channels of the dimmer pack DDS 5600 may be operated by an analog 0-10 VDC control voltage. This type of control will provide 0% intensity at 0 volts and 100% intensity at 10 volts. Any or all of the DDS 5600 dimmer channels may be operated in this manner simultaneously with any multiplex control input. Each dimmer will respond to the greater of any control inputs.

The analog control input uses a standard 5 pin DIN plug which is available from most electronics supply houses. Connect each of the positive channel control wires to the desired dimmer channel input pins of the plug. Connect the common (ground) control wire to the pin indicated on the diagram. Consult the documentation of the analog control console or device you are using for the proper connections. The control input impedance is 4.7K ohms.

0-10V Input




## DMX512 MULTIPLEX CONTROL WIRING

DMX 512 is the United States Institute of Theater Technology (USITT) standard for the digital control of dimmers. Leviton DDS dimmer products can be converted from Microplex to DMX 512 digital multiplex with a simple kit available from your dealer.

DMX 512 is the preferred type of control wiring when many dimmer channels are used, because of the high update rate and the resistance to interference. It is recommended in locations subject to electrical noise. DMX 512 only requires 3 wires to transmit lighting levels for as many as 512 relay or dimmer channels. Most of the Leviton lighting control consoles can optionally use this interface.

Connect the DMX 512 cable from the control console to the male input connector. Another cable may be connected from the female connector to the male connector of another pack. Many dimmer packs may be "daisy chained" or connected together in this manner.

Be sure to set the Channel Address DIP switch as required (see DIP SWITCH SETTINGS).



### LED INDICATORS

The front panel indicator LEDs indicate the status of the dimmer.

- RED Indicates the firing card is receiving DC power.
- GREEN Steady indicates a multiplex control signal is being received.
- YELLOW Indicates a respective dimmer channel is active and the LED indicates relative intensity.

## AUTO LAMP TEST

Whenever DIP switch #8 is in the OFF (down) position and there is no multiplex signal detected, all channel outputs will come to full intensity. The automatic sequencing feature must be disabled for this Auto Lamp test to operate (see INTERNAL JUMPER SELECTIONS).

## CHANNEL FUSES

Each channel is protected by a fuse to help prevent overload and damage to the power control devices used in the dimmer. Be sure to replace the fuse with the same type of rating. Replacement with the wrong fuse is dangerous and will void your warranty.

NOTE: Lamps may sometimes cause a temporary "short-circuit" when the filament burns out and cause the fuse to blow. This is normal and protects the internal dimmer circuitry from damage.

#### INSTALLATION AND OPERATION TIPS

#### Care should always be taken to:

1) Keep all AC wiring away from control wiring.

2) We also recommend power up and performance checks be done one unit at a time. This can be a real time saver should problems arise thus eliminating unnecessary isolation techniques to resolve problems.